

PREMIER SERIES

FOR MODEL :

E1201



HORIZON
FITNESS

ELLIPTICAL USER'S GUIDE

INTRODUCTION

CONGRATULATIONS and THANK YOU for your purchase of this Premier Series elliptical!

Whether your goal is to win races or simply enjoy a fuller, healthier lifestyle, a Premier Series elliptical can help you attain it - adding club-quality performance to your at-home workouts, with the ergonomics and innovative features you need to get stronger and healthier, faster. Because we're committed to designing fitness equipment from the inside out, we use only the highest quality components. It's a commitment we back with one of the strongest frame-to-brake warranty packages in the industry.

You want exercise equipment that offers the most comfort, the best reliability and the highest quality in its class.

Horizon Premier Series ellipticals deliver.

TABLE OF CONTENTS

Important Precautions	4
Assembly	6
Before You Begin	18
Elliptical Operation	19
Conditioning Guidelines	26
Troubleshooting & Maintenance	30
Limited Warranty	34
CONTACT INFORMATION	Back Panel

IMPORTANT PRECAUTIONS

SAVE THESE INSTRUCTIONS

Read all instructions before using this elliptical. When using an electrical product, basic precautions should always be followed, including the following: Read all instructions before using this elliptical. It is the responsibility of the owner to ensure that all users of this elliptical are adequately informed of all warnings and precautions. If you have any questions after reading this manual, contact Customer Tech Support at the number listed on the back panel of this manual.



To reduce the risk of burns, fire, electrical shock or injury to persons:

- If you experience any kind of pain, including, but not limited to chest pains, nausea, dizziness, or shortness of breath, stop exercising immediately and consult your physician before continuing.
- Maintain a comfortable pace. Do not sprint above 80 rpms.
- To maintain balance, it is recommended to keep a grip on the handlebars while exercising, mounting or dismounting the machine.
- Do not wear clothes that might catch on any part of the elliptical.
- Do not turn pedal arms by hand.
- Make sure handlebars are secure before each use.
- Do not insert or drop any object into any opening.
- Unplug elliptical before moving or cleaning it. To clean, wipe surfaces down with soap and slightly damp cloth only; never use solvents. (See MAINTENANCE)
- This elliptical should not be used by persons weighing more than 300 pounds. Failure to comply will void the warranty.
- This elliptical is intended for in-home use only. Do not use this elliptical in any commercial, rental, school or institutional setting. Failure to comply will void the warranty.
- Do not use elliptical in any location that is not temperature controlled, such as but not limited to garages, porches, pool rooms, bathrooms, car ports or outdoors. Failure to comply may void the warranty.
- Use the elliptical only as described in this manual.
- Keep the topside of the foot support clean and dry.
- Care should be taken when mounting or dismounting the equipment. Before mounting or dismounting, bring the elliptical to 0% incline and move the pedal on the mounting or dismounting side to its lowest position and bring the machine to a complete stop.
- Disconnect all power before servicing the equipment.



At NO time should pets or children under the age of 12 be closer to the elliptical than 10 feet. At NO time should children under the age of 12 use the elliptical. Children over the age of 12 should not use the elliptical without adult supervision.

It is essential that your elliptical is used only indoors, in a climate controlled room. If your elliptical has been exposed to colder temperatures or high moisture climates, it is strongly recommended that the elliptical is warmed up to room temperature before first time use. Failure to do so may cause premature electronic failure.



Connect this exercise product to a properly grounded outlet only. See grounding instructions.

GROUNDING INSTRUCTIONS


This product must be grounded. If a elliptical should malfunction or breakdown, grounding provides a path of least resistance for electrical current to reduce the risk of electrical shock. This product is equipped with a cord having an equipment-grounding conductor and a grounding plug. The plug must be plugged into an appropriate outlet that is properly installed and grounded in accordance with local codes and ordinances.



Improper connection of the equipment-grounding conductor can result in a risk of electric shock. Check with a qualified electrician or serviceman if you are in doubt as to whether the product is properly grounded. Do not modify the plug provided with the product. If it will not fit the outlet, have a proper outlet installed by a qualified electrician.

This product is for use on a nominal 110-volt circuit and has a grounding plug that looks like the illustration to the right. This product must be used on a dedicated circuit. To determine if you are on a dedicated circuit, shut off the power to that circuit and observe if any other devices lose power. If so, move devices to a different circuit. **Note:** There are usually multiple outlets on one circuit. It is recommended that the elliptical be used with a 15 amp circuit for optimal performance.

3-Pole Grounded Outlet

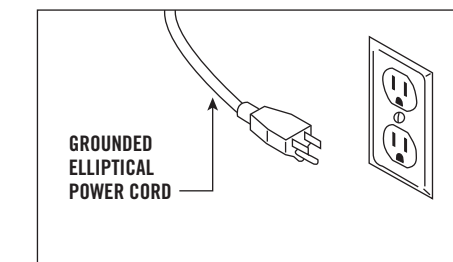

OPERATION

To reduce the risk of damaging important components on your elliptical, it is strongly recommended that your elliptical is plugged into a dedicated 15 amp circuit, without the use of an additional extension cord and/or power strip. Failure to comply may void the warranty.

ASSEMBLY

IMPORTANT: READ THESE SAFETY INSTRUCTIONS BEFORE USE!



There are several areas during the assembly process of an elliptical that special attention must be paid. It is very important to follow the assembly instructions correctly and to make sure all parts are firmly tightened. If the assembly instructions are not followed correctly, the elliptical could have frame parts that are not tightened and will seem loose and may cause irritating noises. To prevent damage to the elliptical, the assembly instructions must be reviewed and corrective actions should be taken.

UNPACKING

Unpack the product where you will be using it. Place the product on a level flat surface. It is recommended that you place a protective covering on your floor. During each assembly step, ensure that ALL nuts and bolts are in place and partially threaded in before completely tightening any ONE bolt.


NOTE: A light application of grease may aid in the installation of hardware. Any grease, such as lithium bike grease is recommended.

Before proceeding, find your elliptical's serial number located on the front stabilizer tube and enter it in the space provided below. Also locate the model name which is located on the mast boot.

ENTER YOUR SERIAL NUMBER AND MODEL NAME IN THE BOXES BELOW:


SERIAL NUMBER :

MODEL NAME :

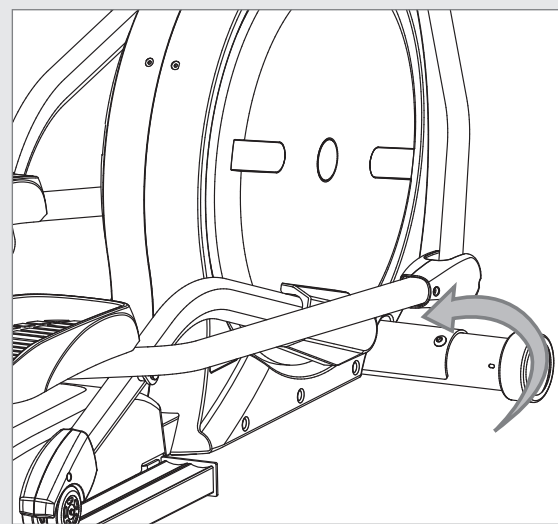

* Refer to the SERIAL NUMBER and MODEL NAME when calling for service.

* Also enter this serial number on your Warranty Card.

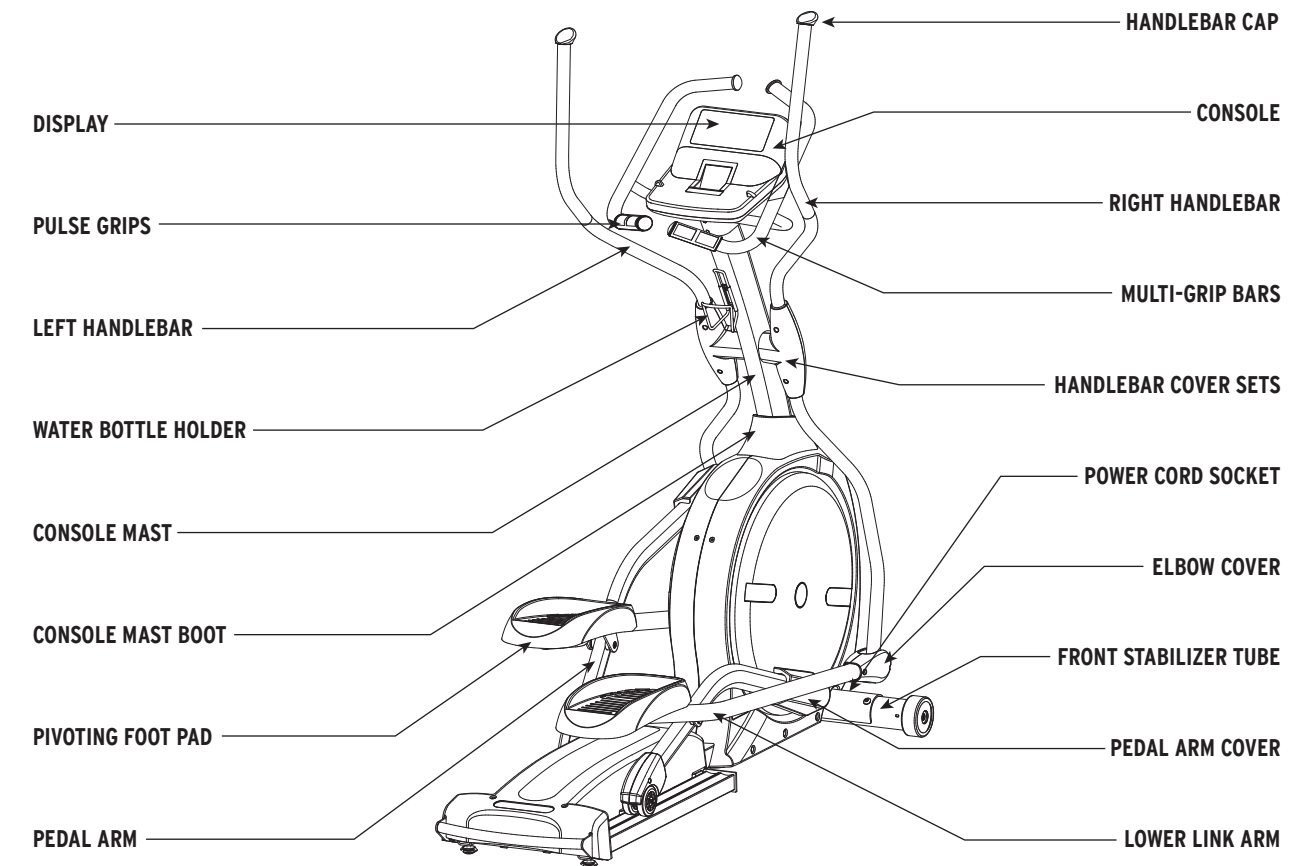

TOOLS INCLUDED

- 5mm Allen Wrench
- Phillips Screw Driver
- 13/15mm Flat Wrench
- 5mm T Wrench


PARTS INCLUDED

- | | |
|--|--|
| <input type="checkbox"/> 1 Console | <input type="checkbox"/> 2 Elbow Covers |
| <input type="checkbox"/> 1 Console Mast | <input type="checkbox"/> 1 Multi-Grip Bars |
| <input type="checkbox"/> 1 Console Mast Boot | <input type="checkbox"/> 2 Pivoting Foot Pads |
| <input type="checkbox"/> 1 Front Stabilizer Tube | <input type="checkbox"/> 1 Water Bottle Holder |
| <input type="checkbox"/> 2 Handlebars (left & right) | <input type="checkbox"/> 6 Hardware Bags |
| <input type="checkbox"/> 2 Handlebar Caps | <input type="checkbox"/> 3 iPod® Dock Inserts |
| <input type="checkbox"/> 2 Handlebar Cover Sets | <input type="checkbox"/> 1 Universal MP3 Player Dock Insert |
| <input type="checkbox"/> 2 Lower Link Arms | <input type="checkbox"/> 1 iPod® Docking Station Rubber Plug |
| <input type="checkbox"/> 2 Pedal Arms | <input type="checkbox"/> 1 Audio Adaptor Cable |
| <input type="checkbox"/> 2 Pedal Arm Covers | <input type="checkbox"/> 1 Power Cord |

If you have questions or if there are any missing parts, contact Customer Tech Support. Contact information is located on the back panel of this manual.

For a complete exploded diagram, visit us at www.horizonfitness.com


ASSEMBLY STEP 1

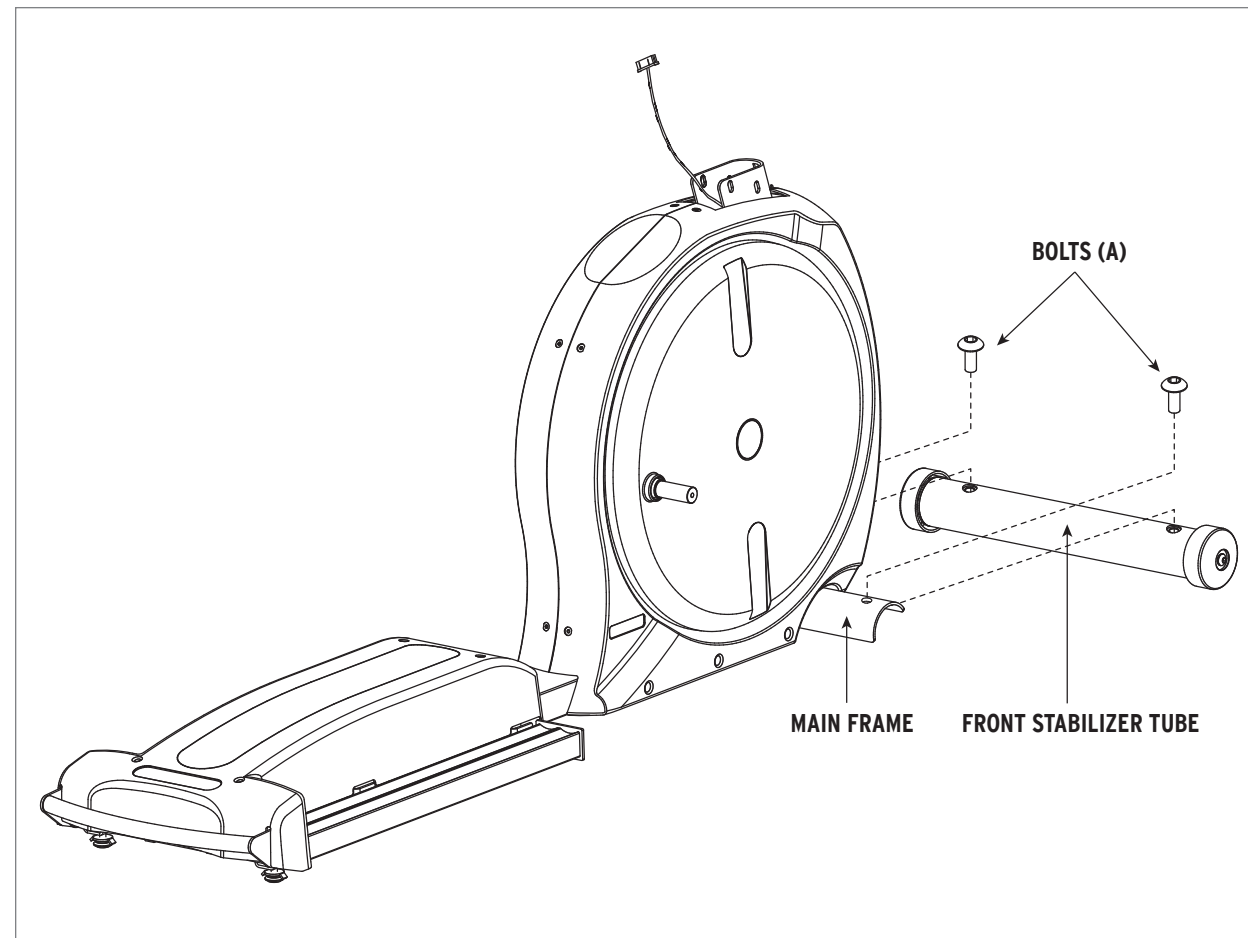


A Open **HARDWARE BAG FOR STEP 1**.

B Attach the **FRONT STABILIZER TUBE** to the **MAIN FRAME** using 2 **BOLTS (A)**.

 HARDWARE BAG FOR STEP 1 CONTENTS :



ASSEMBLY STEP 2

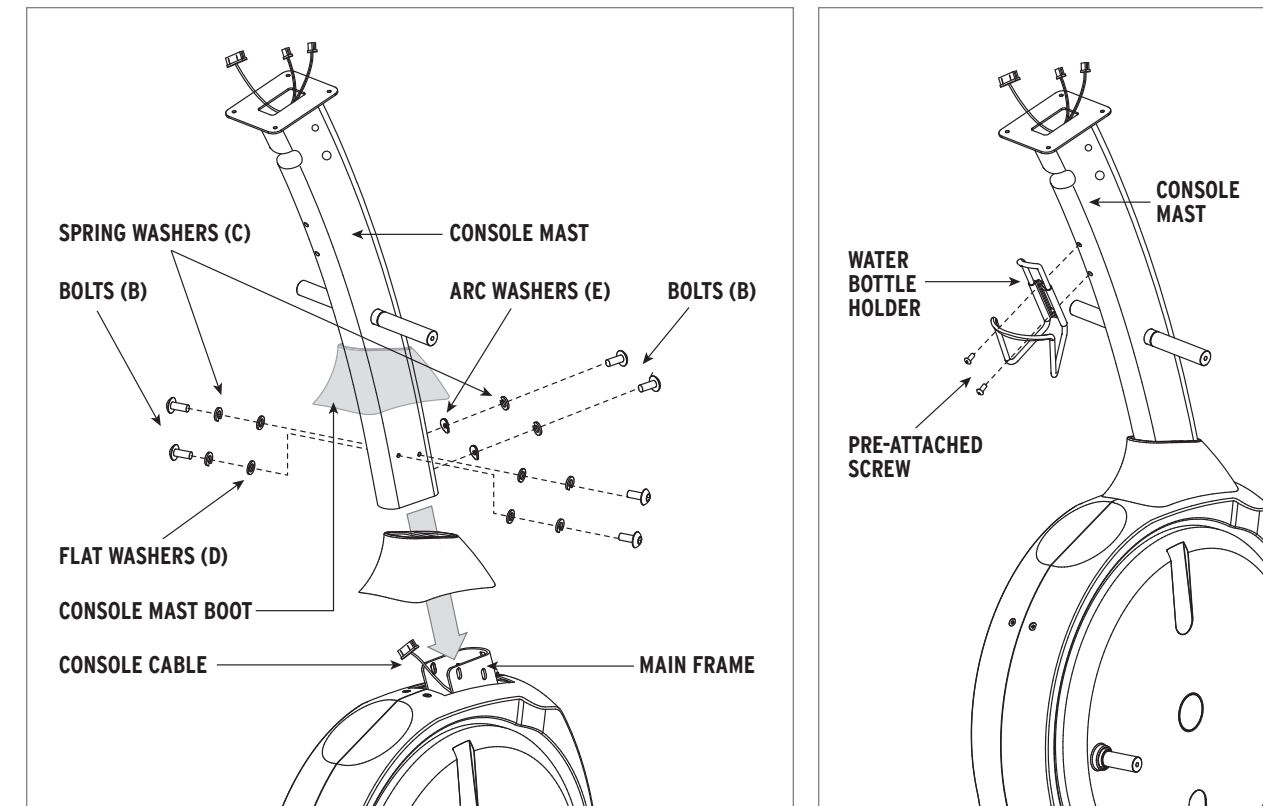

A Open **HARDWARE BAG FOR STEP 2**.

B Slide **CONSOLE MAST BOOT** onto the bottom of the **CONSOLE MAST** above bolt holes as shown above.


C Carefully pull the **CONSOLE CABLE** through the **CONSOLE MAST** using the twist tie located inside the **CONSOLE MAST**.

D Attach the **CONSOLE MAST** to the **MAIN FRAME** using 2 **BOLTS (B)**, 2 **SPRING WASHERS (C)** and 2 **FLAT WASHERS (D)** in each side and 2 **BOLTS (B)**, 2 **SPRING WASHERS (C)** and 2 **ARC WASHERS (E)** in the front of the **CONSOLE MAST**. Slide **CONSOLE MAST BOOT** down to cover **MAIN FRAME**.


DO NOT PINCH WIRES!

E Attach the **WATER BOTTLE HOLDER** to the mast using 2 **PRE-ATTACHED SCREWS**.

HARDWARE BAG FOR STEP 2 CONTENTS :

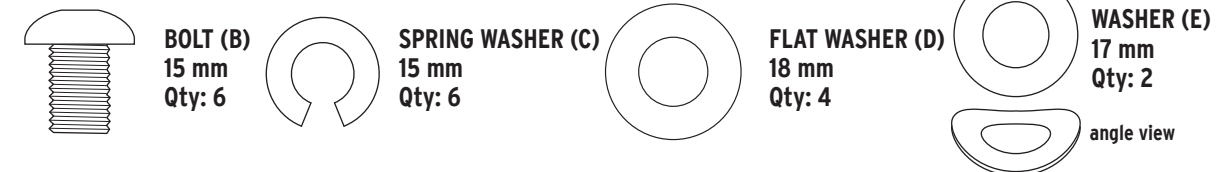

ASSEMBLY STEP 3

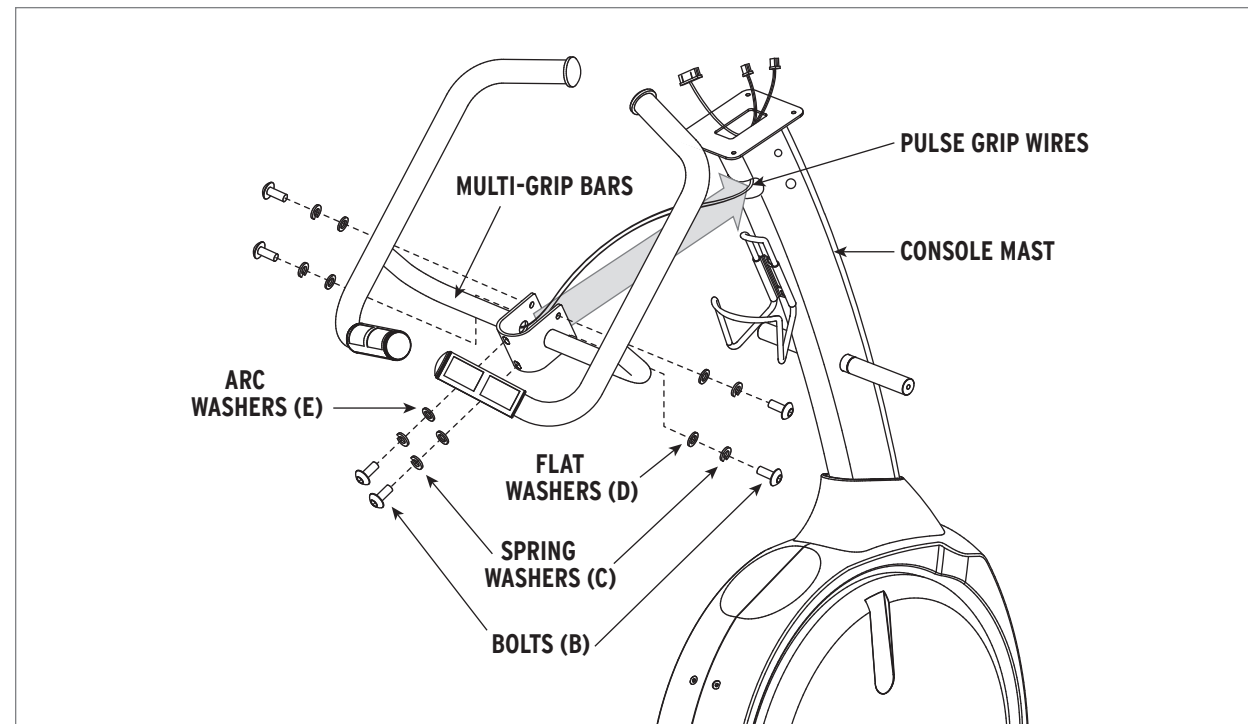


- A Open **HARDWARE BAG FOR STEP 3**.
- B Route **PULSE GRIP WIRES** from **MULTI-GRIP BARS** through **CONSOLE MAST** and up to console hole.

DO NOT PINCH WIRES!

- C Attach the **MULTI-GRIP BARS** to the **CONSOLE MAST** using 2 **BOLTS (B)**, 2 **SPRING WASHERS (C)** and 2 **FLAT WASHERS (D)** in each side and 2 **BOLTS (B)**, 2 **SPRING WASHERS (C)** and 2 **ARC WASHERS (E)** in the rear of the **MULTI-GRIP BARS**.


HARDWARE BAG FOR STEP 3 CONTENTS :

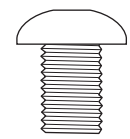

BOLT (B)
15 mm
Qty: 6



SPRING WASHER (C)
15 mm
Qty: 6

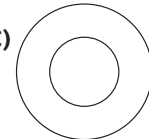

FLAT WASHER (D)
18 mm
Qty: 4




ARC WASHER (E)
17 mm
Qty: 2



angle view


ASSEMBLY STEP 4

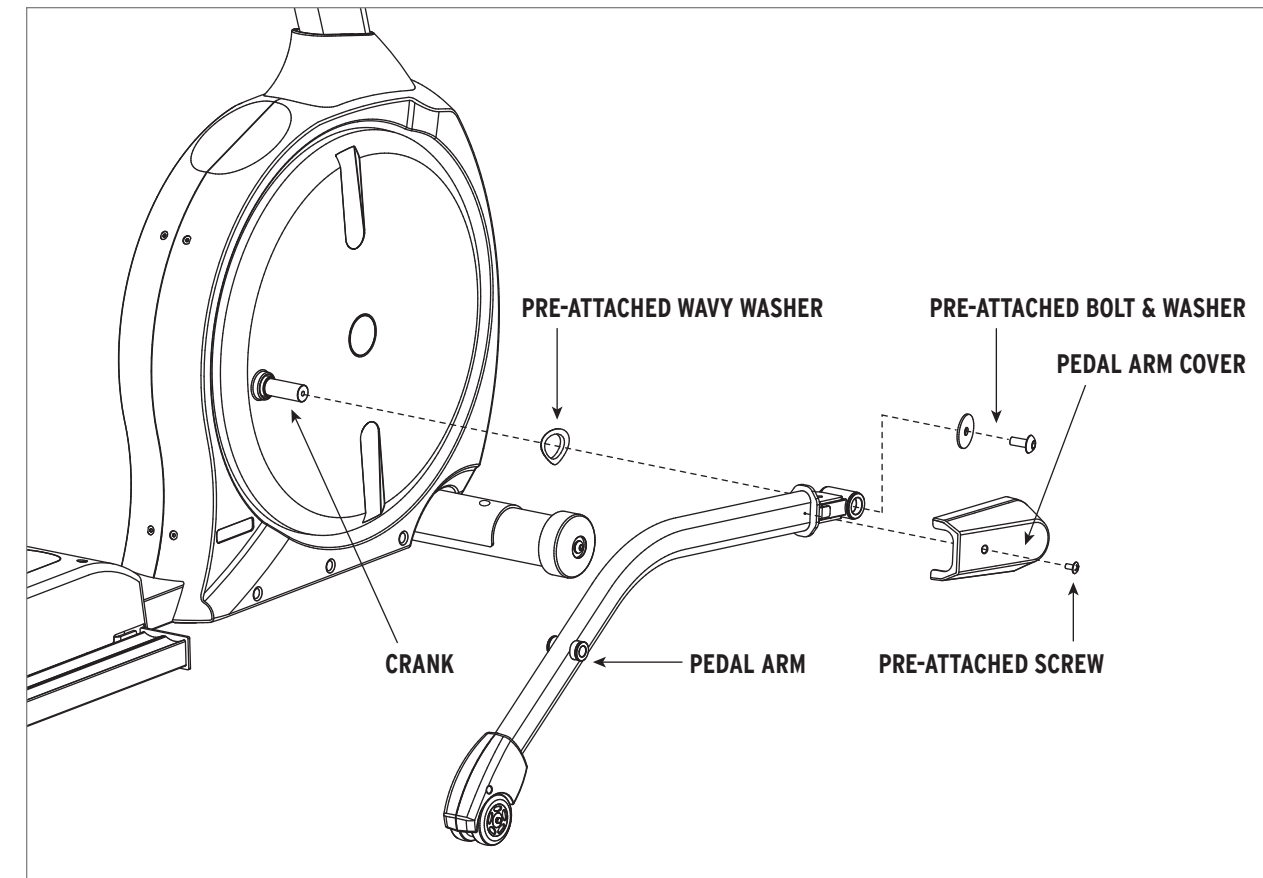

NOTE: There is **NO** hardware bag for this step. All hardware is pre-installed.

- A Remove **PRE-ATTACHED BOLT & WASHER** from **RIGHT PIVOT TUBE**.
- B Slide **RIGHT PEDAL ARM** onto the **CRANK** and attach by re-inserting **PRE-ATTACHED BOLT & WASHER**.
- C Repeat on the other side.
- D Attach the **PEDAL ARM COVER** to the **RIGHT PEDAL ARM** using **PRE-ATTACHED SCREW**.
- E Repeat on the other side.

ASSEMBLY STEP 5

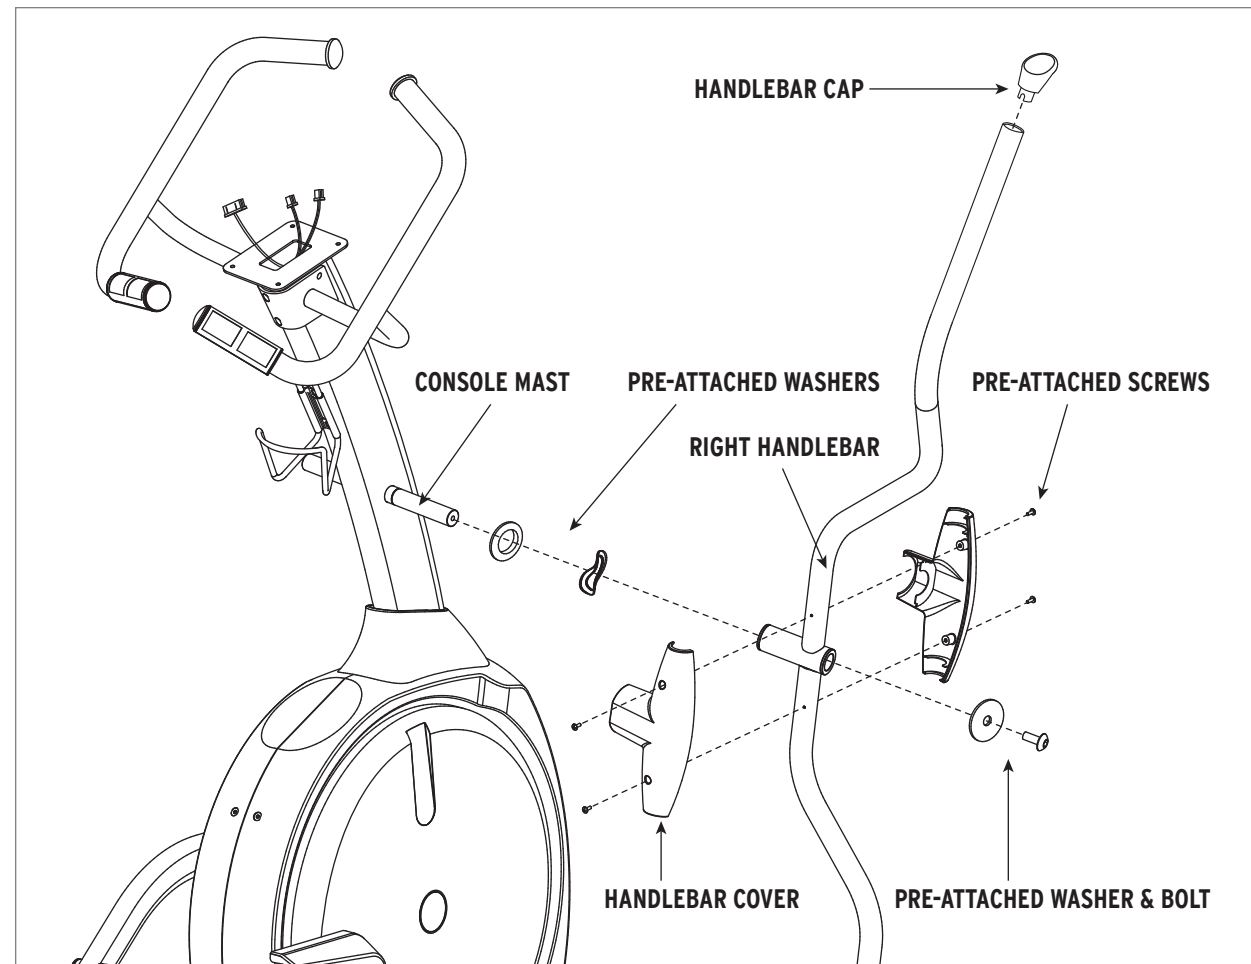

NOTE: There is NO hardware bag for this step. All hardware is pre-installed.


- A Remove PRE-ATTACHED BOLT & WASHER from CONSOLE MAST.
- B Slide RIGHT HANDLEBAR onto CONSOLE MAST and attach by re-inserting PRE-ATTACHED WASHER & BOLT.
- C Remove PRE-ATTACHED SCREWS from RIGHT HANDLEBAR.



After handlebars are assembled they will rotate freely – be cautious. Until the machine is fully assembled, do not grab the handlebars for support.


- D Attach HANDLEBAR COVERS with PRE-ATTACHED SCREWS.
- E Slide HANDLEBAR CAP onto top of RIGHT HANDLEBAR with the slanted side facing the rear of the elliptical (as shown).
- F Repeat on other side.

ASSEMBLY STEP 6

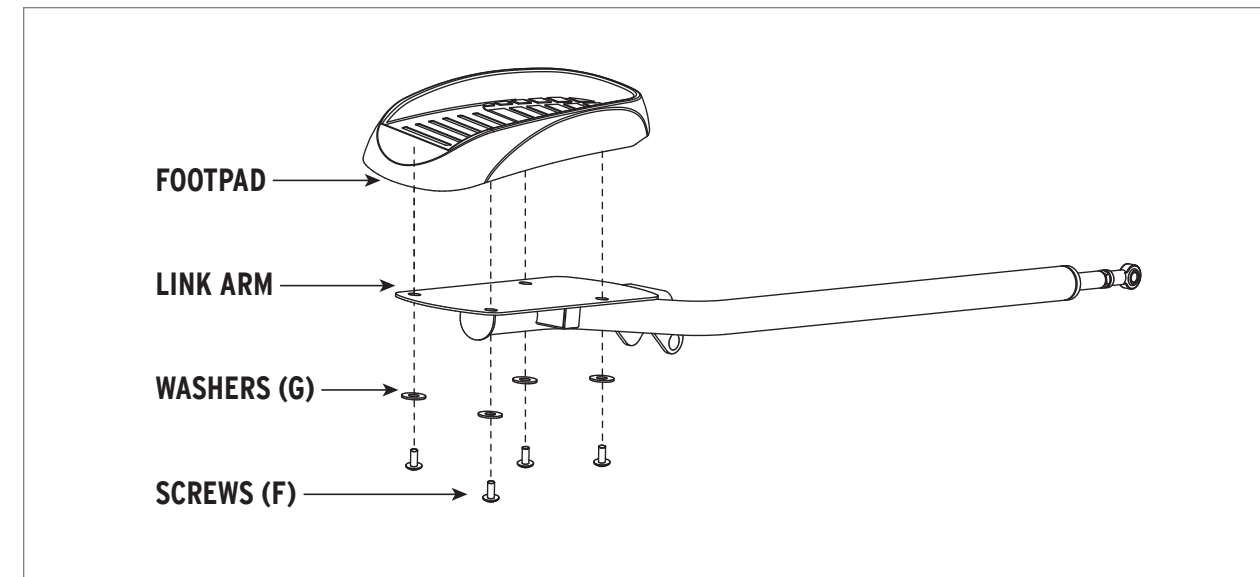


- A Open HARDWARE BAG FOR STEP 6.
- B Attach FOOTPAD to LINK ARM using 4 SCREWS (F) and 4 WASHERS (G).
- C Repeat on other side.

 HARDWARE BAG FOR STEP 6 CONTENTS :




SCREW (F)
16 mm
Qty: 8

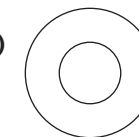


WASHER (G)
18 mm
Qty: 8

ASSEMBLY STEP 7

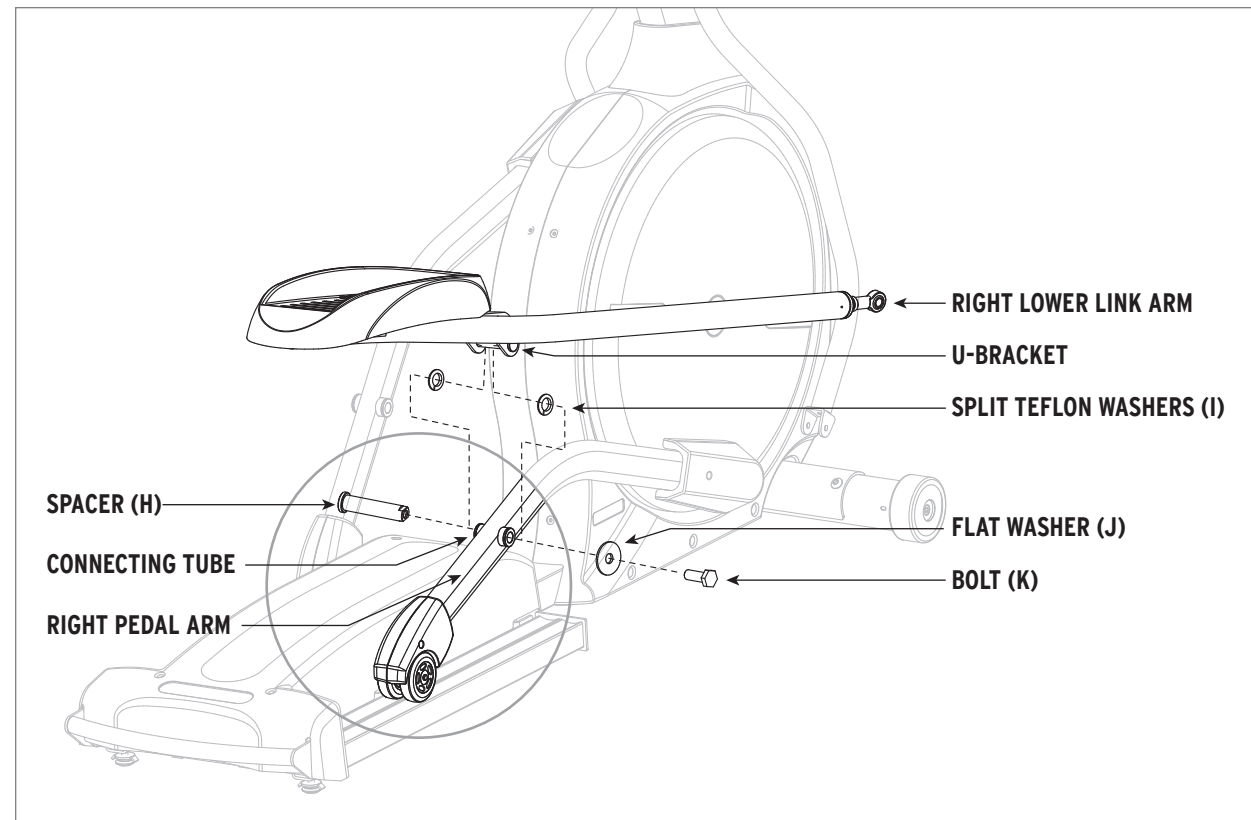


- A** Open **HARDWARE BAG FOR STEP 7**.
- B** Align the **U-BRACKET** on the **RIGHT LOWER LINK ARM** with the **CONNECTING TUBE** on the **RIGHT PEDAL ARM**.
- C** Slide the **SPACER (H)** through the **U-BRACKET** and the **CONNECTING TUBE** so that it can no longer rotate.
- D** Insert 2 **SPLIT TEFLON WASHERS (I)** between the **CONNECTING TUBE** and the **U-BRACKET**.
- E** Secure the joint with a **FLAT WASHER (J)** and **BOLT (K)**.
- F** Repeat on the other side.

HARDWARE BAG FOR STEP 7 CONTENTS :

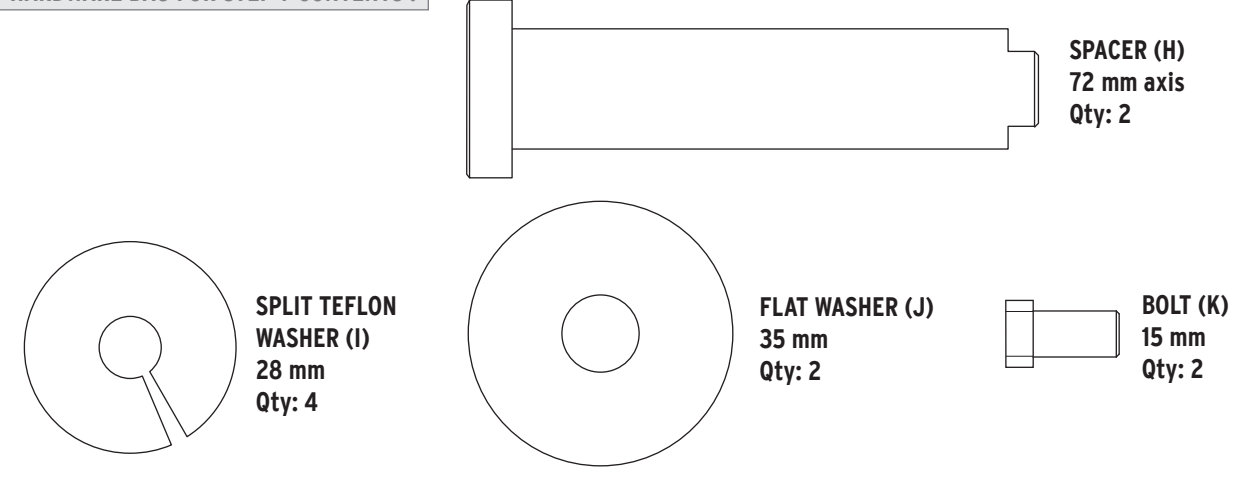


ASSEMBLY STEP 8

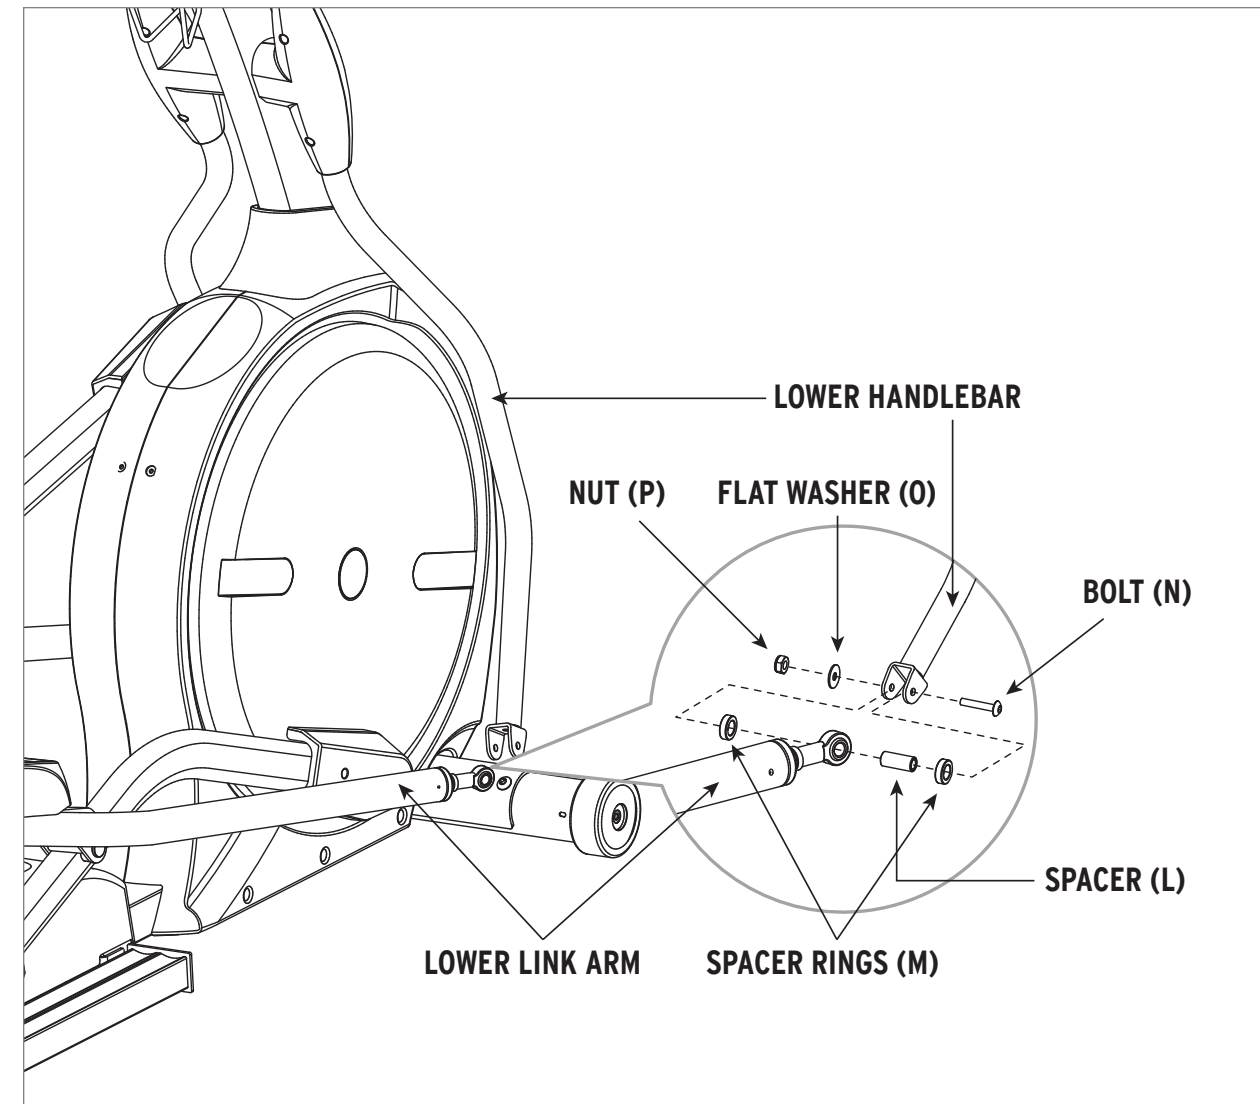


- A** Open **HARDWARE BAG FOR STEP 8**.
- B** Slide **SPACER (L)** into **LOWER LINK ARM**.
- C** Snap 2 **SPACER RINGS (M)** onto both sides of **SPACER (L)**. While holding **SPACER RINGS (O)**, slide **LOWER LINK ARM** into bottom end of **LOWER HANDLEBAR**.
- D** Insert 1 **BOLT (N)** into **LOWER HANDLEBAR** and secure using 1 **WASHER (O)** and 1 **NUT (P)**.
- E** Repeat on other side.


Confirm that the **LOWER HANDLEBAR** and the **LOWER LINK ARM** are marked **R**. The left side is marked **L**.

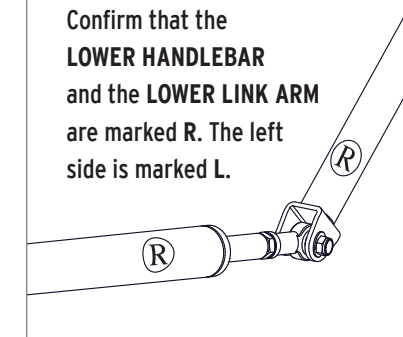

HARDWARE BAG FOR STEP 8 CONTENTS :

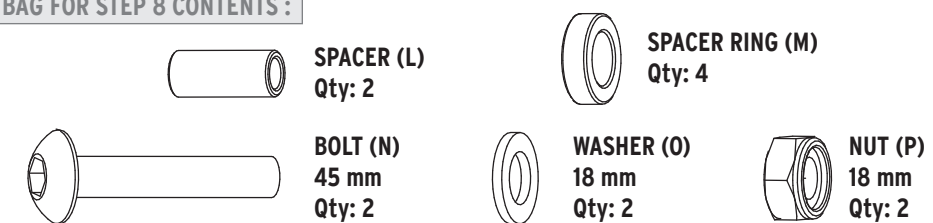


ASSEMBLY STEP 9

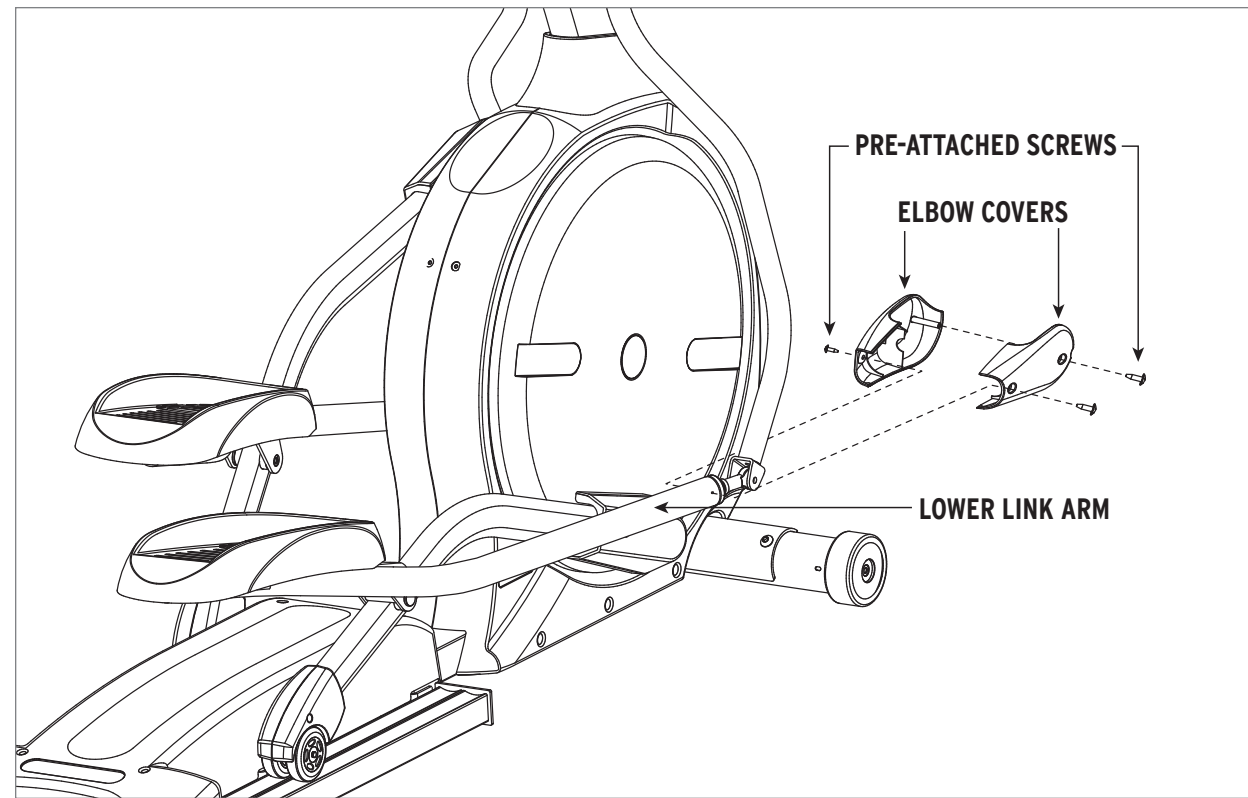

NOTE: There is NO hardware bag for this step. All hardware is pre-installed.

- A Attach the **ELBOW COVERS** to the **LOWER LINK ARM** using 3 **PRE-ATTACHED SCREWS**.
- B Repeat on other side.

ASSEMBLY STEP 10

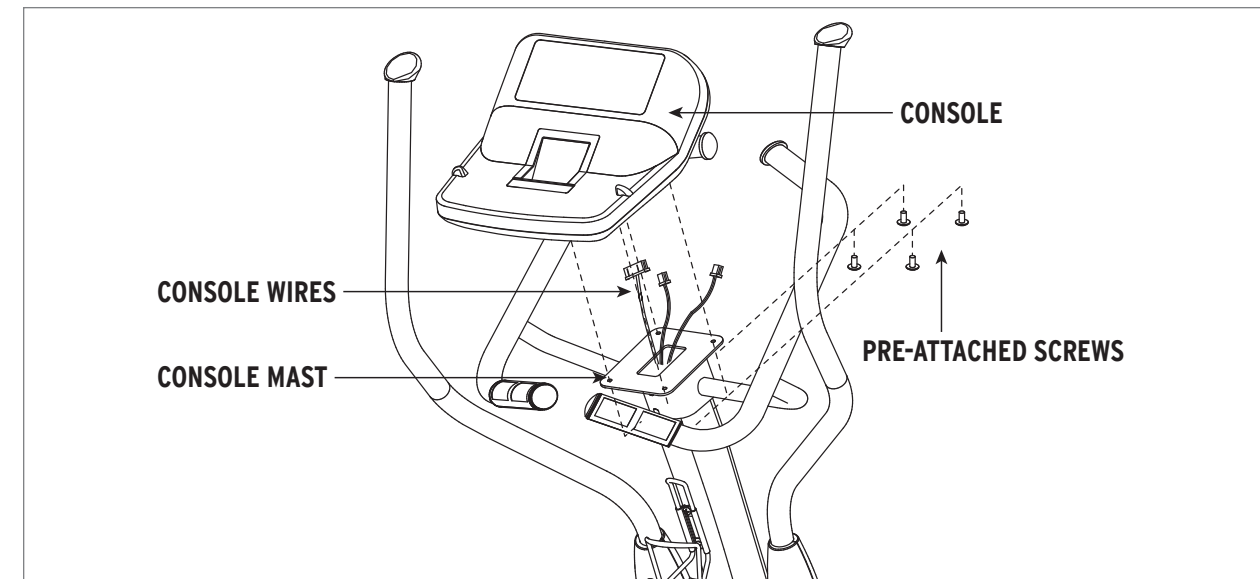

NOTE: There is NO hardware bag for this step. All hardware is pre-installed.

- A Attach the **CONSOLE MAST** wires to the **CONSOLE** wires.
- B Carefully tuck the **CONSOLE MAST** wires into the **CONSOLE MAST** before attaching the **CONSOLE**.
- C Attach **CONSOLE** to the **CONSOLE MAST** using the 4 **PRE-ATTACHED SCREWS** (screws will have to be removed from the console first).

DO NOT PINCH WIRES!

YOU'RE FINISHED!

BEFORE YOU BEGIN

Congratulations on choosing your elliptical. You've taken an important step in developing and sustaining an exercise program! Your elliptical is a tremendously effective tool for achieving your personal fitness goals. Regular use of your elliptical can improve the quality of your life in so many ways.


HERE ARE JUST A FEW OF THE HEALTH BENEFITS OF EXERCISE:

- Weight Loss
- A Healthier Heart
- Improved Muscle Tone
- Increased Daily Energy Levels

The key to reaping these benefits is to develop an exercise habit. Your new elliptical will help you eliminate obstacles that prevent you from exercising. Inclement weather and darkness won't interfere with your workout when you use your elliptical in the comfort of your home. This guide provides you with basic information for using and enjoying your new machine.

LOCATION OF THE ELLIPTICAL

Place the elliptical on a level surface. There should be 6 feet of clearance behind the elliptical, 3 feet on each side and one foot in front for the power cord (See diagram to the right). Do not place the elliptical in any area that will block any vent or air openings. The elliptical should not be located in a garage, covered patio, near water or outdoors.

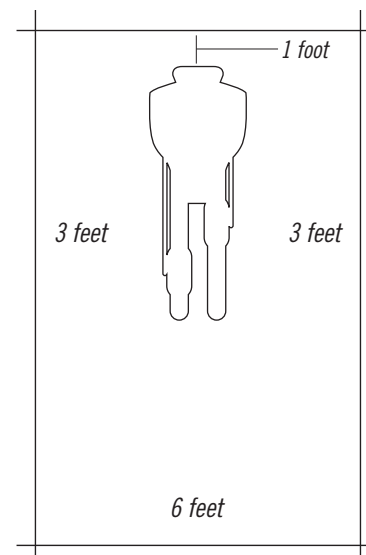

ELLIPTICAL OPERATION

POWER


Your programmable elliptical is powered by a power supply. The power must be plugged into the power jack, which is located in the front of the machine near the STABILIZER TUBE. Make sure the console power switch, located next to the power jack, is in the ON position.

INCLINE OPERATION

If the stop button is pressed to pause the program, the incline motor will remain at its current height. To return the incline to 0%, press start and change the incline to 0% before dismounting. If the stop button is held for 3 seconds to reset the console, the incline will return to 0%.



Do not operate the elliptical if the power cord or plug is damaged. If the elliptical appears to not be working properly, do not use the elliptical.

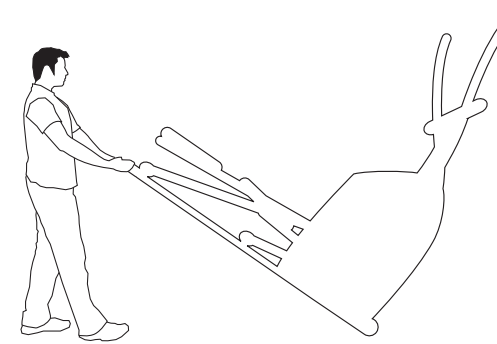

MOVING

Your elliptical has a pair of transport wheels built into the FRONT STABILIZER TUBE. To move, first remove the power supply and firmly grasp the REAR STABILIZER BAR, carefully lift and roll.




Our ellipticals are well built and heavy, weighing up to 280 lbs! Use care and additional help if necessary when moving.

FOOT POSITIONING

Your elliptical offers a variety of foot positions. Moving your foot to the forward most position of the foot pad increases your step height, which will create a feel similar to a step machine. Placing your foot toward the back of the foot pad decreases your step height and creates more of a gliding feel, similar to a smooth walk or run.

Your elliptical also allows you to pedal both forward and backwards to offer a variation to your workout and to focus on other major leg muscle groups such as your hamstrings and calves.

E1201 CONSOLE DISPLAY

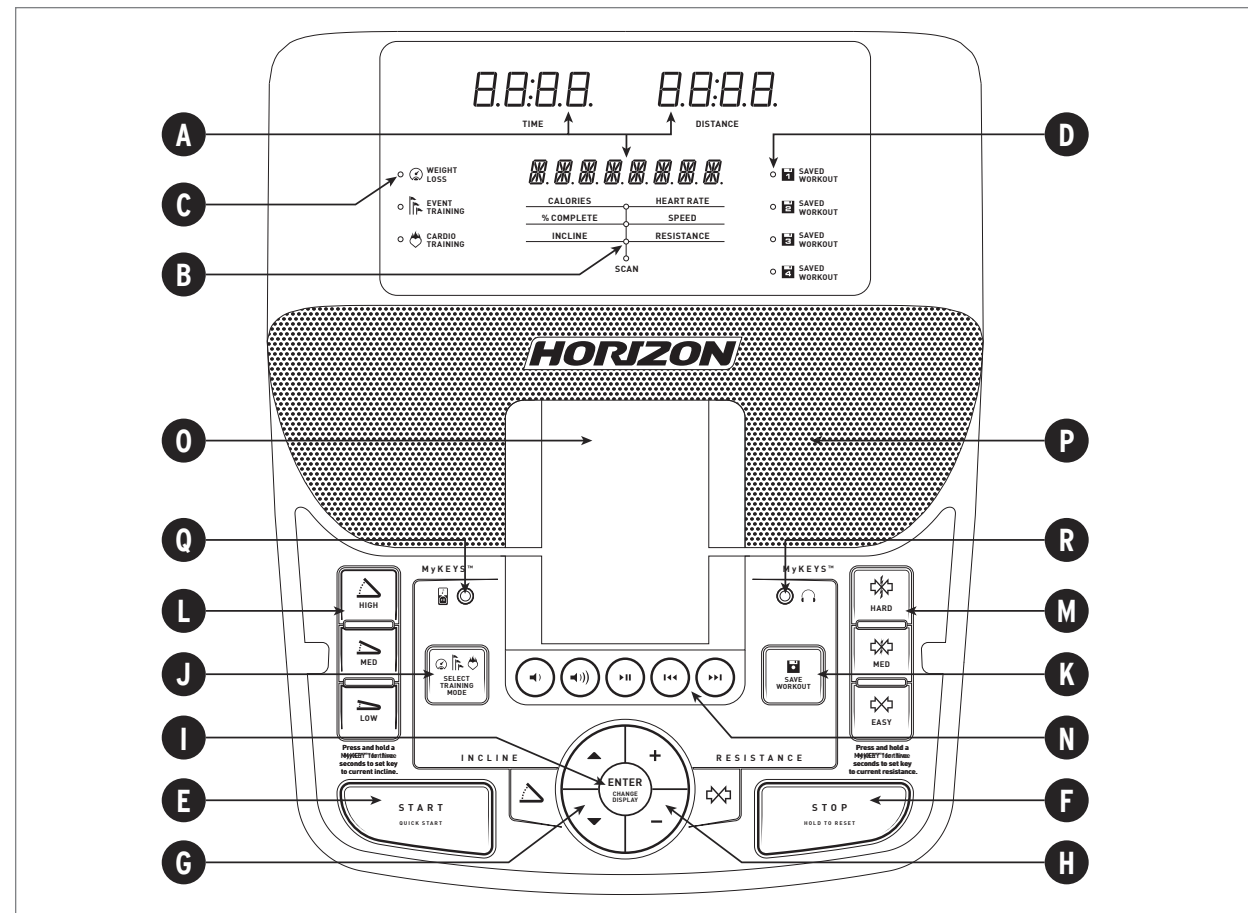

Note: There is a thin protective sheet of clear plastic on the overlay of the console that should be removed.

- A LED WINDOWS:** Time, Distance, Calories, Heart Rate, % Complete, Speed, Incline, Resistance and Scan.
- B FEEDBACK LEDS:** Indicate what workout feedback is currently being displayed.
- C TRAINING MODE LEDS:** Indicate what training mode is currently selected.
- D SAVED WORKOUT LEDS:** Indicate when a saved workout is selected.
- E START:** Press start to begin exercising, starts your workout, or resume exercising after pause.
- F STOP:** Press to pause/end your workout. Hold for 3 seconds to reset the elliptical.
- G INCLINE ▲ / ▼ KEYS:** Used to adjust incline in small increments (10% increments).
- H RESISTANCE + / - KEYS:** Used to adjust resistance in small increments (increments of 1).
- I ENTER:** Used to confirm selection and adjust settings. Press to change display feedback during workout.
- J SELECT TRAINING MODE KEY:** Used to select between 3 training modes: Weight Loss, Event Training and Cardio Training.
- K SAVE WORKOUT KEY:** Used to select and use any of 4 pre-saved workouts. After your workout, press to save a workout for future use.
- L INCLINE MYKEYS™:** Used to reach desired resistance more quickly. See next page for details.
- M RESISTANCE MYKEYS™:** Used to reach desired resistance more quickly. See next page for details.
- N IPOD® CONTROLS:** Press to adjust your attached iPod® audio settings. See page 24 for more info.
- O IPOD® DOCKING STATION:** Used to dock and charge your iPod®.
- P SPEAKERS:** Music plays through speakers when your CD / MP3 player is connected to the console.
- Q AUDIO IN JACK:** Plug your CD / MP3 player into the console using the included audio adaptor cable.
- R AUDIO OUT / HEADPHONE JACK:** Plug your headphones into this jack to listen to your music through the headphones. NOTE: When headphones are plugged into the headphone jack the sound will no longer come out through the speakers.

CONSOLE OPERATION

MyKEYS™

You can program the MyKeys to your desired resistance or incline values.

The **RESISTANCE MYKEYS** defaults are:

- ☒ Easy = 1
- ☒ Med = 8
- ☒ Hard = 12

The **INCLINE MYKEYS** defaults are:

- ▾ Low = 0%
- ▾ Med = 30%
- ▾ High = 70%

To change the default value of any MyKEY, while in a workout, first select the resistance or incline level you would like to save, then press and hold the MyKEY you wish to change for 3 seconds. The current incline or resistance level will flash on the console and beep three times indicating that the new level has been saved successfully.

NOTE: Easy/Low cannot be set higher than Med and Med cannot be set higher than Hard/High. The console will beep once if the values are incorrect and the value will not be saved.

HEART RATE

PULSE GRIPS

Place the palm of your hands directly on the grip pulse handlebars. Both hands must grip the bars for your heart rate to register. It takes 5 consecutive heart beats (15-20 seconds) for your heart rate to register. When gripping the pulse handlebars, do not grip tightly. Holding the grips tightly may elevate your blood pressure. Keep a loose, cupping hold. You may experience an erratic readout if consistently holding the grip pulse handlebars. Make sure to clean the pulse sensors to ensure proper contact can be maintained.

IMPORTANT: The heart rate function on this product is not a medical device. While heart rate grips can provide a relative estimation of your actual heart rate, they should not be relied on when accurate readings are necessary. Some people, including those in a cardiac rehab program, may benefit from using an alternate heart rate monitoring system like a chest or wrist strap. Various factors, including movement of the user, may affect the accuracy of your heart rate reading. The heart rate reading is intended only as an exercise aid in determining heart rate trends in general. Please consult your physician.

QUICK START

Use this mode if you wish to begin working out immediately.

- 1 Turn on the elliptical (the switch is located at the bottom-front of the elliptical).
- 2 Press **START** key and begin exercising.
- 3 Workout will automatically count time up from 0:00, the resistance will default to Level 1, and the incline will default to 0%.
- 4 The incline and resistance level can be adjusted during the workout.

SELECTING TRAINING MODES

MANUAL MODE

If you do not want to use a training mode workout, you can use MANUAL MODE instead. This mode only changes incline or resistance levels when adjusted by the user.

- 1 Press **SELECT TRAINING MODE** key until Manual scrolls across the screen.
- 2 Press **ENTER** key to select Manual Mode.
- 3 Set the time duration of the workout using the + / - or ▲ / ▼ keys.
- 4 Press **START** to begin exercising.
- 5 The incline and resistance level can be adjusted during the workout.
- 6 The time will count down from the pre-selected duration.

TRAINING MODE: WEIGHT LOSS

This mode keeps you in the ideal fat burning zone while shaping and toning your body.

- 1 Press **SELECT TRAINING MODE** key until **WEIGHT LOSS** scrolls across the screen and the LED is lit next to **WEIGHT LOSS**.
- 2 Press **ENTER** to select **WEIGHT LOSS**.
- 3 Set your maximum resistance using the + / - or ▲ / ▼ keys.
- 4 Press **ENTER** to select the maximum resistance.
- 5 Set your minimum resistance using the + / - or ▲ / ▼ keys.
- 6 Press **ENTER** to select the minimum resistance.
- 7 Set the time duration of the workout using the + / - or ▲ / ▼ keys.
- 8 Press **START** to begin exercising.

WEIGHT LOSS TRAINING MODE - SEGMENTS REPEAT														
SEGMENT	WARM UP		1	2	3	4	5	6	7	8	9	10	COOL DOWN	
TIME	2:00	2:00	60	60	60	60	60	60	60	60	60	60	2:00	2:00
RESISTANCE	1	1	2	2	4	4	6	6	6	6	4	4	1	1

These values are based off a maximum setting of 6 and a minimum setting of 2. Actual resistance values will be based upon your maximum and minimum settings.

TRAINING MODE: EVENT TRAINING

If you are training for a race or need to increase your stamina, this is the training mode for you.

- 1 Press **SELECT TRAINING MODE** key until **EVENT TRAINING** scrolls across the screen and the LED is lit next to **EVENT TRAINING**.
- 2 Press **ENTER** to select **EVENT TRAINING**.
- 3 Set your maximum resistance using the + / - or ▲ / ▼ keys.
- 4 Press **ENTER** to select the maximum resistance.
- 5 Set your minimum resistance using the + / - or ▲ / ▼ keys.
- 6 Press **ENTER** to select the minimum resistance.
- 7 Set the time duration of the workout using the + / - or ▲ / ▼ keys.
- 8 Press **START** to begin exercising.

EVENT TRAINING MODE - SEGMENTS REPEAT																
SEGMENT	WARM UP		1	2	3	4	5	6	7	8	9	10	11	12	COOL DOWN	
TIME	2:00	2:00	60	60	60	60	60	60	60	60	60	60	60	60	2:00	2:00
RESISTANCE	1	1	9	2	2	9	9	2	9	2	2	9	9	9	1	1

These values are based off a maximum setting of 9 and a minimum setting of 2. Actual resistance values will be based upon your maximum and minimum settings.

TRAINING MODE: CARDIO TRAINING

Select this mode if you want a challenging cardio workout that is sure to get you sweating!

- 1 Press **SELECT TRAINING MODE** key until **CARDIO TRAINING** scrolls across the screen and the LED is lit next to **CARDIO TRAINING**.
- 2 Press **ENTER** to select **CARDIO TRAINING**.
- 3 Set your maximum incline using the + / - or ▲ / ▼ keys.
- 4 Press **ENTER** to select the maximum incline.
- 5 Set your minimum incline using the + / - or ▲ / ▼ keys.
- 6 Press **ENTER** to select the minimum incline.
- 7 Set the time duration of the workout using the + / - or ▲ / ▼ keys.
- 8 Press **START** to begin exercising.

Uses your maximum and minimum to calculate the incline. Resistance segments are preset.

CARDIO TRAINING MODE - SEGMENTS REPEAT														
SEGMENT	WARM UP		1	2	3	4	5	6	7	8	9	10	COOL DOWN	
TIME	2:00	2:00	60	60	60	60	60	60	60	60	60	60	2:00	2:00
INCLINE	10	10	20	20	40	40	60	60	60	60	40	40	10	10
RESISTANCE	1	2	2	3	4	4	5	5	6	5	5	4	2	1

These values are based off a maximum setting of 60 and a minimum setting of 20. Actual resistance values will be based upon your maximum and minimum settings.

SAVING A WORKOUT

You can save a workout in any of the 4 save workout locations.

- 1 At the end of your workout, the console will prompt you if you would like to save your completed workout by scrolling **SAVE WORKOUT**.
- 2 If you would like to save the workout, press the **SAVE WORKOUT** key.
- 3 The 1 **SAVED WORKOUT** LED will light up. **FREE** or **FULL** will display on the console. **FREE** indicates that this location is empty. **FULL** indicates a previously saved workout is already saved to that particular location. You may save to either a **FREE** or **FULL** location, however if you choose to save to a **FULL** location the previously saved workout will be deleted and replaced with the new workout.
- 4 Press the **SAVE WORKOUT** key until you have selected the desired save workout location you would like to save your workout.
- 5 Press and hold the **SAVE WORKOUT** key for 5 seconds to save the workout for future use. The console will beep 3 times if the workout is saved.

SELECTING A SAVED WORKOUT

- 1 Press **SAVE WORKOUT** key to scroll through workouts you have saved. The **SAVED WORKOUT** LEDs (1-4) will light up. Only the save workout locations to which workouts have been saved will be available. If no workouts have been saved, no saved workouts will be available.
- 2 Once you have selected the saved workout you desire, press **ENTER** or **START** to begin the workout.

NOTE: Changes made to a saved workout will not be saved unless you repeat the save workout process above.

ENTERTAINMENT INFORMATION


USING iPod® AUDIO PLAYER

The Horizon Fitness iPod Docking Station is the entertainment solution for your workouts. Various models of iPod with a dock connector can fit with the use of the included inserts.

Using your iPod Docking Station (iPod not included)

- 1 Remove the **RUBBER PLUG** from bottom of the **DOCKING STATION**.
- 2 Place the **DOCK INSERT** that fits your iPod model into the **DOCKING STATION**.
- 3 Plug in your iPod by matching the **DOCK CONNECTOR PIN** on the elliptical with the dock connector on your iPod. **NOTE:** If you want to connect a different sized iPod, simply lift out the **DOCK INSERT** and replace with a new one.
- 4 Use the **IPOD CONTROLS** on the bottom of the console to adjust volume and song settings. **NOTE:** If you don't want to use the speakers, you can plug your headphones into the **AUDIO OUT JACK** on right of the **IPOD DOCKING STATION**.
- 5 Replace the **RUBBER PLUG** into the bottom of the **DOCKING STATION** when the station is not in use. **NOTE:** iPod audio will not play through speakers if the **AUDIO ADAPTOR CABLE** is plugged in while iPod is in the **DOCKING STATION**.

- 6 Once you have connected the iPod to the docking station, please allow up to 75 seconds for the iPod and docking station to sync up before it will be fully functional. To adjust the volume you must use the **IPOD CONTROLS** located under the docking station. **NOTE:** if you don't want to use the speakers, you can plug your headphones into the **AUDIO OUT JACK** on right of the **IPOD DOCKING STATION**.

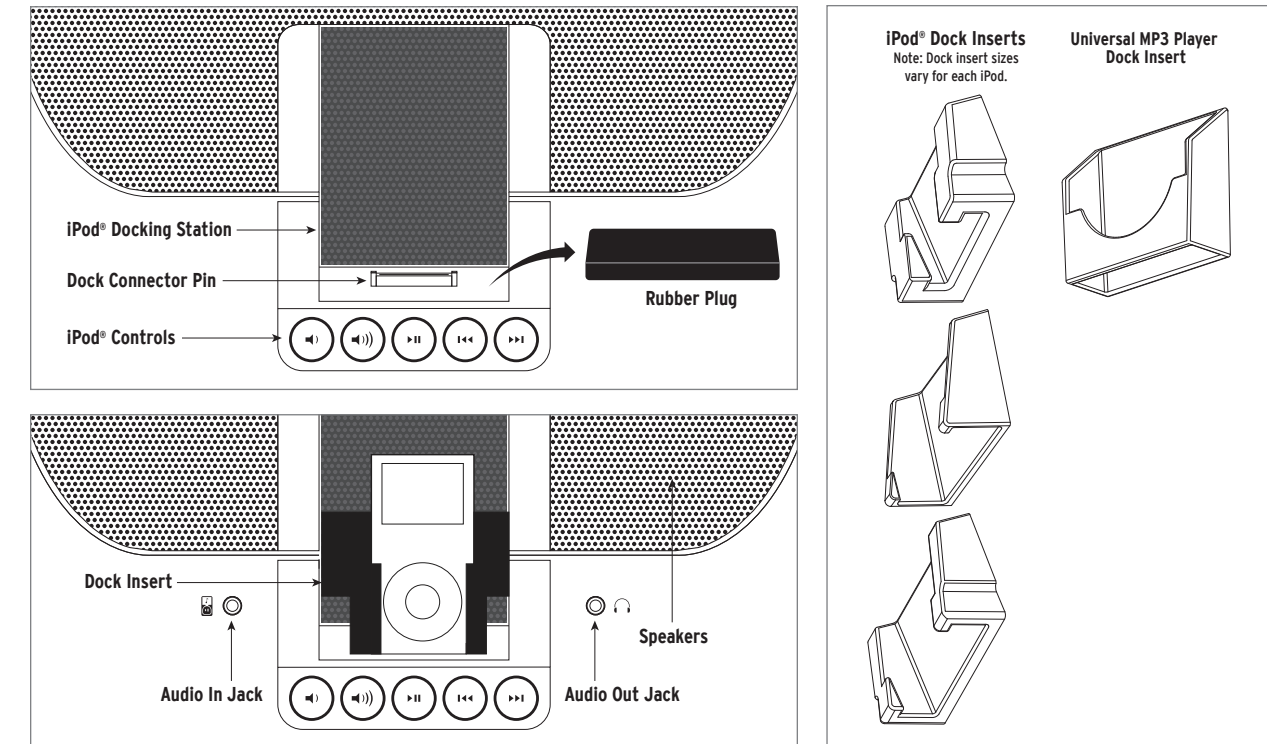

USING NON-iPod® MP3 / CD PLAYERS

- 1 Leave **RUBBER PLUG** at bottom of **DOCKING STATION**.
- 2 To hold your MP3 player in place in the **DOCKING STATION**, use the **UNIVERSAL MP3 PLAYER INSERT**. **NOTE:** Only iPod is compatible with the **DOCK CONNECTOR PIN** in the **IPOD DOCKING STATION**.
- 3 Connect the included **AUDIO ADAPTOR CABLE** to the **AUDIO IN JACK** on left of the **IPOD DOCKING STATION** and the headphone jack on your CD / MP3 player.
- 4 Use your CD / MP3 player buttons to adjust song settings. **NOTE:** if you don't want to use the speakers, you can plug your headphones into the **AUDIO OUT JACK** on right of the **IPOD® DOCKING STATION**.
- 5 Remove the **AUDIO ADAPTOR CABLE** when not in use.

CONDITIONING GUIDELINES

ALWAYS CONSULT YOUR PHYSICIAN BEFORE BEGINNING AN EXERCISE PROGRAM.

HOW OFTEN? (Frequency of Workouts)

The American Heart Association recommends that you exercise at least 3 to 4 days per week to maintain cardiovascular fitness. If you have other goals such as weight or fat loss, you will achieve your goal faster with more frequent exercise. Whether it's 3 days or 6 days, remember that your ultimate goal should be to make exercise a lifetime habit. Many people are successful staying with a fitness program if they set aside a specific time of day to exercise. It doesn't matter whether it's in the morning before breakfast, during lunch hour or while watching the evening news. What's more important is that it's a time that allows you to keep a schedule, and a time when you won't be interrupted. To be successful with your fitness program, you have to make it a priority in your life. So decide on a time, pull out your day planner and pencil in your exercise times for the next month!

HOW LONG? (Duration of Workouts)

For aerobic exercise benefits, it's recommended that you exercise from between 24 and 60 minutes per session. But start slowly and gradually increase your exercise times. If you've been sedentary during the past year, it may be a good idea to keep your exercise times to as little as five minutes initially. Your body will need time to adjust to the new activity. If your goal is weight loss, a longer exercise session at lower intensities has been found to be most effective. A workout time of 48 minutes or more is recommended for best weight loss results.

HOW HARD? (Intensity of Workouts)

How hard you workout is also determined by your goals. If you use your machine to prepare for a 5K workout, you will probably work out at a higher intensity than if your goal is general fitness. Regardless of your long term goals, always begin an exercise program at low intensity. Aerobic exercise does not have to be painful to be beneficial! There are two ways to measure your exercise intensity. The first is by monitoring your heart rate and the second is by evaluating your perceived exertion level (this is simpler than it sounds!).


PERCEIVED EXERTION LEVEL

A simple way to gauge your exercise intensity is to evaluate your perceived exertion level. While exercising, if you are too winded to maintain a conversation without gasping, you are working out too hard. A good rule of thumb is to work to the point of exhilaration, not exhaustion. If you cannot catch your breath, it's time to slow down. Always be aware of these warning signs of overexertion.

TARGET HEART RATE ZONE CHART

What is Target Heart Rate Zone?

Target Heart Rate Zone tells you the number of times per minute your heart needs to beat to achieve a desired workout effect. It is represented as a percentage of the maximum number of times your heart can beat per minute. Target Zone will vary for each individual, depending on age, current level of conditioning, and personal fitness goals. The American Heart Association recommends working-out at a Target Heart Rate Zone of between 60% and 75% of your maximum heart rate. A beginner will want to workout in the 60% range while a more experienced exerciser will want to workout in the 70-75% range. See chart for reference.

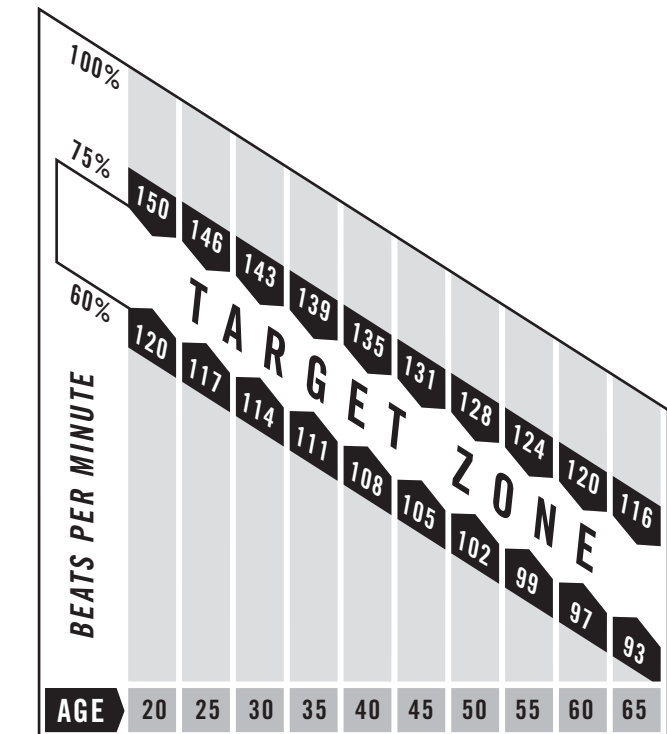


EXAMPLE:

For a 42-year-old user: Find age along the bottom of the chart (round to 40), follow age column up to the target zone bar. Results: 60% of maximum Heart Rate = 108 Beats Per Minute, 75% of maximum Heart Rate = 135 Beat Per Minute.


ALWAYS CONSULT YOUR PHYSICIAN BEFORE BEGINNING AN EXERCISE PROGRAM.

TIPS ✓**STRETCHING****STRETCH FIRST**


Before using your product, it is best to take a few minutes to do a few gentle stretching exercises. Stretching prior to exercise will improve flexibility and reduce chances of exercise related injury. Ease into each of these stretches with a slow gentle motion. Do not stretch to the point of pain. Make sure not to bounce while doing these stretches.

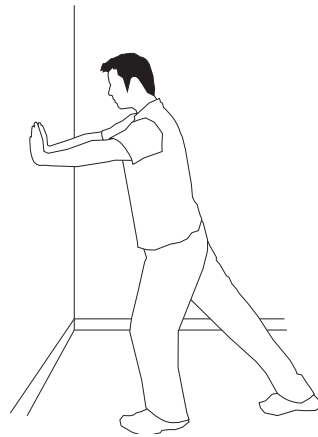**1. STANDING CALF MUSCLE STRETCH**

Stand near a wall with the toes of your left foot about 18" from the wall, and the right foot about 12" behind the other foot. Lean forward, pushing against the wall with your palms. Keep your heels flat and hold this position for a count of 15 seconds. Make sure that you do not bounce while stretching. Repeat on the other side.

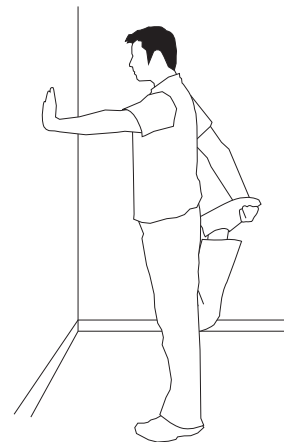**2. STANDING QUADRICEP STRETCH**

Using a wall to provide balance, grasp your right ankle with your right hand and hold your foot against the back of your thigh for 15 seconds. Repeat with your left ankle and hand.

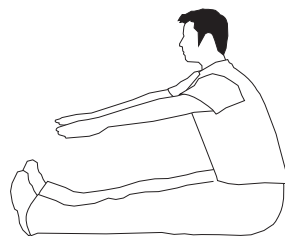**3. SITTING HAMSTRING & LOWER BACK MUSCLE STRETCH**

Sit on the floor with your legs together and straight out in front of you. Do not lock your knees. Extend your fingers towards your toes and hold for a count of 15 seconds. Make sure that you do not bounce while stretching. Sit upright again. Repeat one time.

TIPS ✓**THE IMPORTANCE OF WARM UP & COOL DOWN****WARM UP**

The first 2 to 5 minutes of a workout should be devoted to warming up. The warm-up will limber your muscles and prepare them for more strenuous exercise. Make sure that you warm-up on your product at a slow pace. The warm up should gradually bring your heart rate into your Target Heart Rate Zone.

COOL DOWN

Never stop exercising suddenly! A cool-down period of 3-5 minutes allows your heart to readjust to the decreased demand. Make sure that your cool down period consists of a very slow pace to allow your heart rate to lower. After the cool-down, repeat the stretching exercises listed above to loosen and relax your muscles.

TIPS ✓**ACHIEVING YOUR FITNESS GOALS**

An important step in developing a long term fitness program is to determine your goals. Is your primary goal for exercising to lose weight? Improve muscle? Reduce stress? Prepare for the spring racing schedule? Knowing what your goals are will help you develop a more successful exercise program. Below are some common exercise goals:

- Weight Loss - lower intensity, longer duration workouts
- Improve Body Shape and Tone - interval workouts, alternate between high and low intensities
- Increased Energy Level - more frequent daily workouts
- Improved Sports Performance - high intensity workouts
- Improved Cardiovascular Endurance - moderate intensity, longer duration workouts

If possible try to define your personal goals in precise, measurable terms, and then put your goals in writing. The more specific you can be, the easier it will be to track your progress. If your goals are long term, divide them up into monthly and weekly segments. Longer term goals can lose some of the immediate motivation benefits. Short term goals are easier to achieve. Your console provides you with several readouts that can be used to record your progress. You can track Distance, Calories or Time.

KEEPING AN EXERCISE DIARY

To make your personal exercise log book, print the weekly and monthly log sheets off of your computer by going to:

www.horizonfitness.com/guides/weeklylog.pdf
www.horizonfitness.com/guides/monthlylog.pdf

As your fitness improves, you can look back and see how far you've come!

TROUBLESHOOTING

Your Horizon Fitness elliptical is designed to be reliable. However, if you do experience problems with your elliptical, please reference the troubleshooting guide listed below.

PROBLEM: The console does not light up.

SOLUTION: Verify the following:

- The outlet the machine is plugged into is functional. Double check that the breaker has not tripped.
- The correct power cord is being used. Only use the power cord provided or authorized by Horizon Fitness.
- The power cord is not pinched or damaged and is properly plugged into the outlet AND the machine.
- The power switch is turned to the ON position (may not apply to all models).
- Turn off the machine and unplug power cord. Remove the console and check that all connections to the console are secure and not damaged or pinched.

NOTE: If your console uses batteries, they may need to be replaced.

PROBLEM: The console lights up but the Time/RPM's do not count.

SOLUTION: Verify the following:

- Turn off machine and unplug power cord. Remove the console and check that all connections to the console are secure and not damaged or pinched.
- If doing the above does not fix the problem, the speed sensor and/or magnet may have become dislodged or damaged.

PROBLEM: The resistance levels seem to be incorrect, seeming too hard or too easy.

SOLUTION: Verify the following:

- The correct power cord is being used. Only use the power cord provided or authorized by Horizon Fitness.
- Reset the console and allow the resistance to reset to the default position. Restart and retry the resistance levels.

PROBLEM: The roller wheels appear to be leaving particles on the guide rails.

SOLUTION: This is considered normal wear of the elliptical wheels.

To remove, simply wipe off the roller wheels and guide rails with a damp cloth.

PROBLEM: The elliptical makes a squeaking or chirping noise.

SOLUTION: Verify the following:

- The elliptical is on a level surface.
- Loosen all bolts attached during the assembly process, grease the threads, and tighten again.

PROBLEM: When MP3 player is connected there is no sound coming from the speakers or the speakers sound fuzzy.

SOLUTION: Verify the following:

- Make sure audio cable is plugged in securely to both the console and MP3 Player jacks.

PROBLEM: iPod is not charging from the docking station and/or does not respond to console controls.

SOLUTION: Verify the following:

- Make sure you are using the proper size iPod insert.
- Make sure the iPod dock connector is securely plugged into the connector pin on the elliptical.

HEART RATE TROUBLESHOOTING

PROBLEM: There is no heart rate reading.

SOLUTION: Remove the console and verify that the heart rate cables are attached properly, making sure that the cables are securely inserted into the console.

YOU MAY EXPERIENCE AN ERRATIC READOUT UNDER THE FOLLOWING CONDITIONS:

- Gripping the heart rate handlebars too tight. Try to maintain moderate pressure while holding onto the heart rate handlebars.
- Constant movement and vibration due to constantly holding the heart rate grips while exercising.
- When you are breathing heavily during a workout.
- When your hands are constricted by wearing a ring.
- When your hands are dry or cold. Try moistening your palms or rubbing them together to warm.
- Anyone with heavy arrhythmia.
- Anyone with arteriosclerosis or peripheral circulation disorder.
- Anyone whose skin on the measuring palms is especially thick.

NOTE: Outside interference sources such as computers, motors and fluorescent lights may cause the heart rate reading to be erratic. Check your exercise environment for sources of interference such as high power lines, large motors, etc.

If the above troubleshooting section does not remedy the problem, discontinue use and turn the power off.

**CALL CUSTOMER TECH SUPPORT AT THE NUMBER ON THE BACK PANEL
WHEN YOU ARE NEAR THE EQUIPMENT.**

The following information may be asked of you when you call. Please have these items readily available:

- Model Name
- Serial Number
- Date of Purchase (receipt or credit card statement)

In order for Customer Tech Support to service your elliptical they may need to ask detailed questions about the symptoms that are occurring. Some troubleshooting questions that may be asked are:

- How long has this problem been occurring?
- Does this problem occur with every use? With every user?
- If you are hearing a noise, does it come from the front, back or inside? What kind of noise is it (thumping, grinding, squeaking, chirping etc.)?
- If you are having a resistance problem what is occurring? Is the resistance always too hard or too easy? Does the resistance respond when pushing the buttons on the console? Does the resistance constantly cycle through the levels during the workout?
- Has the machine been maintained per the maintenance schedule?
- Does the problem occur when using the handlebars? Without using the handlebars?

Answering these and other questions will give the technicians the ability to send proper replacement parts and the service necessary to get you and your Horizon Fitness elliptical running again!

COMMON PRODUCT QUESTIONS

ARE THE SOUNDS MY ELLIPTICAL MAKES NORMAL?

Our ellipticals are some of the quietest available because they use belt drives and friction free magnetic resistance. We use the highest grade bearings and belts to minimize noise. However, because the resistance system itself is so quiet, you will occasionally hear other slight mechanical noises. Unlike older, louder technologies, there are no fans, friction belts, or alternator noises to mask these sounds on our ellipticals. These mechanical noises, which may or may not be intermittent, are normal and are caused by the transfer of significant amounts of energy to a rapidly spinning flywheel. All bearings, belts and other rotating parts will generate some noise which will transmit through the casing and frame. It is also normal for these sounds to change slightly during a workout and over time because of thermal expansion of the parts.

WHY IS THE ELLIPTICAL I HAD DELIVERED LOUDER THAN THE ONE AT THE STORE?

All fitness products seem quieter in a large store showroom because there is generally more background noise than in your home. Also, there will be less reverberation on a carpeted concrete floor than on a wood overlay floor. Sometimes a heavy rubber mat will help reduce reverberation through the floor. If a fitness product is placed close to a wall, there will be more reflected noise.

HOW LONG WILL THE DRIVE BELT LAST?

The computer modeling we have done indicated virtually thousands of maintenance free hours. Belts are now commonly used in far more demanding applications such as motorcycle drives.

CAN I MOVE THE TRAINER EASILY ONCE IT IS ASSEMBLED?

Your elliptical has a pair of transport wheels built into the front legs. It is easy to move your elliptical by rolling it on the front transport wheels. It is important that you place your elliptical in a comfortable and inviting room. Your elliptical is designed to use minimal floor space. Many people will place their ellipticals facing the TV or a picture window. If at all possible, avoid putting your elliptical in a unfinished basement. To make exercise a desirable daily activity for you, the elliptical should be in a comfortable setting.

CAN I PEDAL BACKWARDS ON MY ELLIPTICAL?

Your elliptical allows you to pedal both forward and backwards to exercise and strengthen a wider range of muscles.

MAINTENANCE

WHAT KIND OF ROUTINE MAINTENANCE IS REQUIRED?

We use sealed bearings throughout our ellipticals so lubrication is not needed. The most important maintenance steps are to wipe perspiration off the unit after each use and periodically checking the assembly bolts for tightness.

HOW DO I CLEAN MY ELLIPTICAL?

Clean with soap and water cleaners only. Never use solvents on plastic parts.

Cleanliness of your elliptical and its operating environment will keep maintenance problems and service calls to a minimum. For this reason, Horizon Fitness recommends that the following preventive maintenance schedule be followed.

AFTER EACH USE (DAILY)

Turn off the elliptical by unplugging the power cord from the wall outlet

- Wipe down the elliptical with a damp cloth. Never use solvents, as they can cause damage to the elliptical.
- Inspect the power cord. If the power cord is damaged, contact Horizon Fitness.
- Make sure the power cord is not underneath the elliptical or in any other area where it can become pinched or cut.



To remove power from the elliptical, the power cord must be disconnected from the wall outlet.

WEEKLY

Clean underneath the elliptical, following these steps:

- Turn off the elliptical
- Move the elliptical to a remote location.
- Wipe or vacuum any dust particles or other objects that may have accumulated underneath the elliptical.
- Return the elliptical to its previous position.

EVERY MONTH

- Inspect all assembly bolts and pedals on the machine for proper tightness.
- Clean any debris off of the pedal arm wheels and guide rails.

LIMITED HOME-USE WARRANTY

Weight Capacity = 300 lbs

FRAME • LIFETIME

Horizon Fitness warrants the frame against defects in workmanship and materials for the lifetime of the original owner so long as the device remains in the possession of the original owner. (The frame is defined as the welded metal base of the unit and does not include any parts that can be removed.)

BRAKE • LIFETIME

Horizon Fitness warrants the brake against defects in workmanship and materials for the lifetime of the unit from the date of original purchase, so long as the device remains in the possession of the original owner.

ELECTRONICS & PARTS • 4 YEARS

Horizon Fitness warrants the electronic components and all original parts for a period of four years from the date of original purchase, so long as the device remains in the possession of the original owner.

INCLINE MOTOR • 1 YEAR

Horizon Fitness warrants the incline motor against defects in workmanship and materials for one year from the date of original purchase, so long as the device remains in the possession of the original owner.

LABOR • 1 YEAR

Horizon Fitness shall cover the labor cost for the repair of the device for a period of one year from the date of the original purchase, so long as the device remains in the possession of the original owner.

EXCLUSIONS AND LIMITATIONS

Who is covered:

- The original owner and is not transferable.

What IS covered:

- Repair or replacement of a defective motor, electronic component, or defective part and is the sole remedy of the warranty.

What IS NOT covered:

- Normal wear and tear, improper assembly or maintenance, or installation of parts or accessories not originally intended or compatible with the equipment as sold.
- Damage or failure due to accident, abuse, corrosion, discoloration of paint or plastic, neglect, theft, vandalism, fire, flood, wind, lightning, freezing, or other natural disasters of any kind, power reduction, fluctuation or failure from whatever cause, unusual atmospheric conditions, collision, introduction of foreign objects into the covered unit, or modifications that are unauthorized or not recommended by Horizon Fitness.
- Incidental or consequential damages. Horizon Fitness is not responsible or liable for indirect, special or consequential damages, including damage incurred during a move, economic loss, loss of property, or profits, loss of enjoyment or use, or other consequential damages of whatsoever nature in connection with the purchase, use, repair or maintenance of the product.
- Equipment used for commercial purposes or any use other than a single family or Household, unless endorsed by Horizon Fitness for coverage.
- Equipment owner or operated outside the US and Canada.
- Delivery, assembly, installation, setup for original or replacement units or labor or other costs associated with removal or replacement of the covered unit.
- Any attempt to repair this equipment creates a risk of injury. Horizon Fitness is not responsible or liable for any damage, loss or liability arising from any personal injury incurred during the course of, or as a result of any repair or attempted repair of your fitness equipment by other than an authorized service technician. All repairs attempted by you on your fitness equipment are undertaken AT YOUR OWN RISK and Horizon Fitness shall have no liability for any injury to the person or property arising from such repairs.

SERVICE/RETURNS

- In-home service is available within 150 miles of the nearest authorized repair center (Mileage beyond 150 miles from an authorized service center is the responsibility of the consumer).
- All returns must be pre-authorized by Horizon Fitness.
- Horizon Fitness's obligation under this warranty is limited to replacing or repairing, at Horizon Fitness's option, the same or comparable model at one of its authorized service centers.
- A Horizon Fitness authorized service center must receive all equipment for which a warranty claim is made. This equipment must be received with all freight and other transportation charges prepaid, accompanied by sufficient proof of purchase.
- Replacement units, parts and electronic components reconditioned to As-new Condition by Horizon Fitness or its vendors may sometimes be supplied as warranty replacement and constitute fulfillment of warranty terms.
- This warranty gives you specific legal rights, and your rights may vary from state to state.

CUSTOMER TECH SUPPORT



DO NOT RETURN TO THE RETAILER
if you have any problems during
assembly or if parts are missing.

For fast and friendly service, please contact one of our
trained customer technicians via phone, email or our website.

Customer Tech Support Hotline: **1-877-501-4327**

Email: comments@horizonfitness.com

Website: www.horizonfitness.com

We take pride in providing you with a high quality product. We want to know if you have a
problem and we want to have an opportunity to correct it for you.

NOTE: Please read the TROUBLESHOOTING section before contacting Customer Tech Support.
To receive additional product information, visit us at www.horizonfitness.com



HORIZON
FITNESS

1620 Landmark Drive,
Cottage Grove WI, 53527
Tel: 1.877.501.4327

MAY BE COVERED BY ONE OR MORE
PATENTS OR PATENTS PENDING

US 5540637	US 6149551
US 5573480	US 7316633
US 5813949	CN 99808486.7
US 5924962	TW 364373
US 5938567	TW 371899
US 6135927	